

Codes marked with an \* (asterisk) are default features.

**1. Enable/Disable PDF**



**2. PDF Processing Indicator - Enable/Disable Audible Indicator**



**3. Enable/Disable PDF CodeGate® in Stand**



**4. Enable/Disable PDF CodeGate® Out-of-Stand**

Enable  
PDF CodeGate  
Out-of-Stand



\* Disable  
PDF CodeGate  
Out-of-Stand



**5. Enable/Disable Fun Tones**

To enable fun tones scan the *Enable Fun Tones* code then scan an *Optional Tone* code. For a complete list of *Optional Tone* codes refer to the *Scanner Operation: Beeper Options* section of the 00-02544 Configuration Guide provided with your scanner.

Enable Fun Tones



\* Disable Fun Tones



---

**Do not scan bar code below this line. For Metrologic internal use only.**

---



April 2003  
Printed in the USA